
INDUSTRIAL DOBBY LOOM

User's Manual

AVL Looms
3851 Morrow Lane, Suite 9
Chico, CA 95928-8305 U.S.A.
530 893-4915
530 893-1372 (fax #)
info@avlusa.com (e-mail)
www.avlusa.com

Copyright © 2002
All Rights Reserved Worldwide

TABLE OF CONTENTS

Parts List	1
INTRODUCTION	2
About this Manual	2
PREPARATIONS	3
Supplemental Loom Support	3
1.) Squaring	3
2.) Flexible Air Link	3
3.) Floor Brackets	3
SAFETY	4
TO START THE LOOM	5
Pre-Op Checklist	5
Controls	5
1.) Computer	5
2.) Manual Loom Control	5
Automatic Loom Control	6
USING PAUSE, STOP, EMERGENCY STOP	7
RESTARTING AFTER AN "EMERGENCY STOP"	8
Reversing Cloth Direction	9
ADJUSTMENTS	10
Compressor	10
FR	10
REGULATORS	11
CYLINDER FLOW CONTROLS	11
SYNCHRONIZED LOOM MOTION	12
Automatic Cloth Advance Speed Adjustment	12
Automatic Advance and Cloth Beam Gear Adjustment	12
Dobby Cylinder Speed Adjustment	13
Beater Speed Adjustment	13
Cloth Storage Power Control	13
CLOTH BEAM ROTATION ADJUSTMENT	14
Adjusting Lever	15
Sleeve Exchange	15
PRESSURE ROLLER	15
TEMPLE SYSTEM	16
Setting the Temple Rollers	16
Temple Rings	17
WARP TENSION	17
Set Tension	18
Troubleshooting Tip	19
SHUTTLE BOX ADJUSTMENT	19
Backplate Tilt	19
Backplate Cant	20
Shuttle Box to Race Adjustment	20
Box Timing	21

TABLE OF CONTENTS

MAINTENANCE	22
Daily	22
Weekly	22
Monthly	22
As Needed	22
TROUBLE SHOOTING	23
General	23
Troubleshooting Tips	23
Shuttle Doesn't Fire	23
Shuttle Won't Stay On Race	23
Shuttle Doesn't Box Completely	24
Loom Fires On Empty Box	24
Loom Stops -- Red Light On	24
Loom Stops -- Green Light On	24
Harnesses Drop or Don't Lift	24
Automatic Cloth Advance Inoperable	24
Inconsistent Pick Count	25
Loose Shed	25

PARTS LIST

- 1.) Harness Pulley Support
- 2.) Harness Pulleys (three sets)
- 3.) Dobby Cylinder
- 4.) Compu-Dobby
- 6.) Switch Box
- 7.) Dobby Head
- 8.) Top Horizontal
- 9.) Four-Box Shuttle Assembly
- 10.) Beater Top
- 11.) Reed
- 12.) Shuttle Race
- 13.) Beater Slide Rod
- 14.) Harnesses
- 15.) Castle
- 16.) Rear Vertical
- 18.) Beater Cylinder Assembly
- 19.) Front Vertical
- 20.) Middle Horizontal
- 22.) Cloth Storage Beam Support
- 25.) Spring Levers
- 26.) Bottom Horizontal
- 28.) Harness Springs
- 29.) Beater Slide Bracket
- 30.) Back Plate
- 31.) Lower Front
- 32.) Spring Lever Support
- 34.) Harness Cable Retainer
- 35.) Warp Beam Brake Drum
- 36.) Tension Arm Pulley
- 37.) Warp Beam (plain)
- 38.) Warp Beam Handle
- 40.) Separation Roller
- 41.) Warp Beam Retainer
- 42.) Upper Back
- 43.) Lower Back

- 44.) Cloth Storage Beam
- 45.) Cloth Beam
- 46.) Cloth Beam Gear
- 47.) Harness Cables
- 51.) Beater Slide Bearing
- 54.) Stop Collar
- 55.) Beater Assembly Mounting Bracket
- 56.) Beater Slide Bracket
- 57.) Beater Tube
- 59.) Rear Beater Shock Absorber Assembly

INTRODUCTION

Your Industrial Dobby Loom (IDL) is designed to be low-maintenance and immediately “user-friendly”. If you are an experienced power loom weaver, you may initially think this loom is a little quaint. If you’re more familiar with handlooms, it may seem impossibly busy and complicated. With a little hands-on experience, however, you’ll find that the IDL is “just right”. Considerable attention has been paid to the needs of the weaver. In addition to those things we know you’ll need, we’ve provided features that we think you’ll want. For example, the cloth beam can be removed so that you’ll have more working room when sleying the reed and we’ve placed the main operating controls conveniently “front-and-center”. Feature for feature, you’ll soon discover that the IDL is the best loom in its class.

About this Manual

We know that most people have neither the time, nor the interest, in wading through pages of jargon-laden techarcana. We’ll not burden you with such here. However, there is certain amount of information that you will need, like how to turn the IDL “on”, how to make adjustments, and what you’ll need to do to keep your loom in top working condition.

Wherever possible, we’ve provided you with “fast-track” explanations through processes. In most cases, more detailed information will be given in a side bar or information block. And we know that a picture is worth at least a thousand words, so you’ll have illustrations to guide you as well.

Finally, you’ll find a Maintenance and Troubleshooting section in the back of the manual.

PREPARATIONS

Your IDL will have been assembled and tested before it left the factory. An AVL technician will, in most cases, have uncrated and installed the loom at your facility, run it, and made any necessary adjustments. It is also likely that someone on your staff will have been oriented to the loom.

Supplemental Loom Support

Depending on the circumstances of your particular installation, you may find it necessary to provide some additional support for your loom.

1.) Squaring

In order for your loom to function properly, it must be level, front-to-back and side-to-side. To check front-to-back, place a carpenter's level along the top of each Top Horizontal. Check side-to-side by placing the level along the length of the Cloth Beam and, again, along the Lower Back framing member. If you find that the loom is significantly out of level, you'll need to either correct the floor or shim the legs of the loom. To square your loom, measure its diagonals, front to rear. These should be equal.

2.) Flexible Air Link

If the air line from your compressor is made of a rigid material (steel pipe, pvc, copper), we suggest that you provide a flexible link between it and the loom. Simply connect a foot or more of 3/8" air hose between the FR and the end of the compressor line. This link will dampen vibration between your loom and the incoming air line, lessening the possibility of loosened fittings.

3.) Floor Brackets

Your loom is equipped with special shock absorbing pads which will retard its tendency to "walk". In some situations, the loom may need to be anchored to the floor. Brackets made for this purpose are available from AVL.

If you opt to bolt your loom to the floor, be sure to first check its squareness.

Bolting the loom to the floor will, overtime, reduce the need to readjust the squareness of the loom and the box adjustments.

SAFETY

Yes, we need to talk about safety. Any piece of equipment, from a hammer to a buzz saw, can be hazardous if it's misused or misunderstood. The IDL is fitted with a variety of safety devices, but the critical element in using this machine safely is your good **COMMONSENSE** and **ATTENTION TO THE RULES**. And the rules are as follow:

- 1.) Never, under any circumstances, remove or disable one of your loom's safety devices.
- 2.) Err on the side of caution: if something seems wrong, assume it is. Stop the loom until you've figured it out.
- 3.) Don't take chances — be particularly careful about your hands.
- 4.) Disconnect both electrical power and air before you do any maintenance on your loom.
- 5.) Don't guess. If you're unsure about anything, and this manual doesn't help, call our technical support number at 800 626-9615.
- 6.) Never stand at the end of the shuttle boxes when the loom is in motion.

BE SAFE!!! You'll come across other safety tips as you read more about your IDL. **PLEASE**, if you read nothing else in this manual, read this safety information!

TO START THE LOOM

Pre-Op Checklist

We advise that you first operate your loom with empty shuttles. This will give you an opportunity to study the action of the loom and will point up any operating deficiencies. But before you put the loom in motion:

- Check that the shuttle boxes align with the shuttle race.
- Check that the shuttle boxes traverse their support rods without rubbing or binding (move up and down by hand).
- Check that the FR is set to operate at 105+ pounds of pressure.
- Check that your compressor is rated to deliver at least 24 cubic feet of air per minute at 150 p.s.i.

Controls

1.) Computer

Assuming that your computer is connected to the Compu-Dobby, and that you've loaded your software, make those menu selections that are appropriate for a plain weave; this provides a good test scenario.

2.) Manual Loom Control

Assuming, as well, that your air line and power cord are connected:

- Switch on the Compu-Dobby at the power center or front of the Compu-Dobby.
- Set the **AUTO/MANUAL** control on the Control Box to **MANUAL**.
- Load an empty shuttle into box #2 (push it all the way back against the picker).
- Again, at the Control Box, turn the **TURN ON/PUSH OFF** button clockwise. The loom is now operational.

- Using the hand control that connects to the Control Box, depress the **ADVANCE** button once: *the Cloth Beam rotates a degree or so.*
- Depress the **DOBBY** button: *the harnesses lift.*
- Depress the **SHUTTLE** button: *the shuttle shoots.*
[repeat]
- Depress the **DOBBY** button: *the harnesses drop.*
- Depress the **BEATER** button: *the beater advances.*
- Depress the **BEATER**: *the beater returns.*

If any of the italicized actions did NOT occur, refer to the troubleshooting guide at the end of the manual. If the loom appears to be operating satisfactorily, proceed to Automatic Loom Control.

Automatic Loom Control

Automatic Loom Control means hands-free operation. Your loom will automatically cycle through its pre-programmed weaving plan; you'll need only to load and replace bobbins as they empty. This will be your usual weaving mode, your production mode.

BE SAFE!!! If you need to suddenly stop your loom at any time, push the **EMERGENCY STOP** on the Control Panel.

However, if you use the **EMERGENCY STOP**, you'll likely need to make an adjustment in your program. Remember: the **EMERGENCY STOP** will not allow the loom to proceed to the end of the current pick cycle, however, when you restart the loom, it will automatically move to the top of the next cycle (see "Restarting After an Emergency Stop" on page 8).

- 1.) Set the **AUTO/MANUAL** control on the Control Box to **AUTO**: the red light on is.

CAUTION:

The next step will put the loom in motion. Be sure that no one is standing at either end of the shuttle race and that all hands are clear of the front of the beater and other pinch points.

- 2.) Now, if you're ready, press the green **RUN** button: *the green light is on, the red light is off, the loom will cycle continuously.*
- 3.) Hit the **PAUSE** button at any time to temporarily stop the loom: *the green light is off, the yellow light is on, the loom stops.*
- 4.) There are four practical ways to stop your loom:
 - Hit **STOP**
 - Hit **PAUSE**
 - Hit **EMERGENCY STOP**
 - Pull the plug

**USING PAUSE,
STOP,
EMERGENCY
STOP**

In the end, each of these actions will bring the loom to a standstill; but, different situations call for different methods.

	<u>APPLICATION</u>	<u>ACTION</u>
STOP	To stop the loom for any reason	Loom works to the end of the cycle and stops
	To resume, press RUN	No unintended effects
PAUSE	To stop the loom when the shuttles don't fully "box"	Interrupts the loom, mid-cycle
	Press PAUSE to resume	No unintended effects
EMERGENCY STOP	When you need to stop NOW	Stops the loom immediately, mid-cycle
	Turn the loom on, Press Run	Unintended Effect: The loom resets at the beginning of the next cycle, may result in a flaw in the fabric — discussion below
PULL THE PLUG	When all else fails	The boss comes running

RESTARTING AFTER AN "EMERGENCY STOP"

If you've used this mode, your loom will likely have stopped somewhere mid-cycle; that is, anywhere between a cloth advance and a beater return. However, when you re-start the loom, it will re-set automatically at the beginning of the *next* cycle. It will simply delete whatever weaving operations were yet to go when it was shut down. If you continue weaving in the **AUTO** mode, you'll develop a flaw in the fabric.

Solution:

- 1.) Switch the loom to **Manual** at the Control Panel.
- 2.) Determine where you are in the weaving sequence.

Reversing Cloth Direction


- 3.) Use the hand control to advance through the remaining steps of the cycle. As a reminder, each cycle consists of the following sequence of steps:

ADVANCE —> DOBBY —> SHUTTLE —> DOBBY —> BEATER —> BEATER

- 4.) RETURN THE LOOM TO **AUTO**, PRESS **RUN**, AND CONTINUE.


It sometimes happens that you'll want to reverse the rotation of your cloth; you want to back-up. This is possible on your IDL, but it does require some extra effort and you'll have to unwind the cloth by hand.

- 1.) Turn off the Cloth Storage/Regulator Switch at the left side of the loom.
- 2.) Lift the Tension Weight Arm to release tension on the warp. You'll want to see a piece of cord to secure the arm to the Upper Horizontal on the loom frame.
- 3.) Pull the pin at the Cloth Storage Beam to disconnect it from the drive hub.

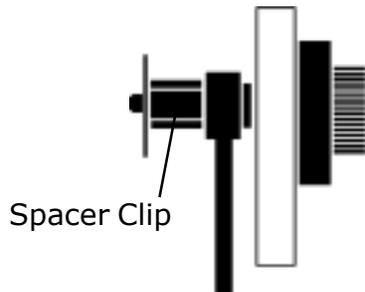

- 4.) (See drawing.) Remove the spacer clip from the Automatic Advance drive shaft.

- 5.) Disengage the Automatic Advance gear by pushing the axle end toward the center of the loom until the gears are unmeshed and the large washer touches the small bearing housing. Install the spacer clip between the large bearing housing and the gear (see drawing).

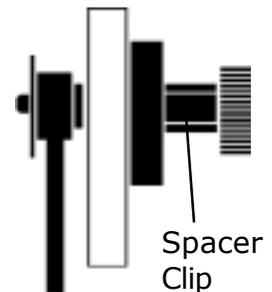

- 6.) Back up the warp.
- 7.) Reverse the above steps to re-engage the Automatic Advance System.
- 8.) Adjust the warp tension.
- 9.) Run a few picks on MANUAL until the fell line has moved within approximately 6" of the reed. A hint here: you may want to disconnect the Auto Advance and comb in the first few picks by hand.
- 10.) Resume normal weaving in automatic mode.

ADJUSTMENTS

You'll need to make certain adjustments to your loom in order to accommodate your changing weaving needs. Most of these adjustments are a matter of refining your preferences as you go or of changing the speed or force at which the loom's mechanisms operate. There are, however, some minimum operating limits that must be adhered to for your IDL to function properly.

Compressor

Your compressor must be able to deliver a minimum of 24 cubic feet of air per minute at 150 pounds per square inch.

FR (keep this set at 115 p.s.i.)

The FR (Filter, Regulator) is mounted on the back of the Computer Cabinet. This is where the air line coming from the compressor connects to the loom. The primary function of this device is to meter the air pressure coming into the system.

Air pressure is measured in pounds-per-square-inch (P.S.I.). If you're not familiar with pneumatic systems, just think of air as you think of gas in your car. The more air, the more power.

You'll see a gauge on the FR and an adjustment knob immediately above it. Turn this knob clockwise to increase pressure. You should start pressure from the FR at 105+ p.s.i. The operating pressure is generally around 120 p.s.i.

REGULATORS

In addition to the FR, there are other regulators that meter the amount of air that is delivered to the different loom systems. These are located on the component board in the computer cabinet in the Component Box, to the left of the FR. Each regulator has a gauge and a yellow plastic locking ring. **REMEMBER:** regulators control power. FLOW CONTROLS, discussed below, control the *speed* at which your systems operate.

Each regulator controls one system and is labeled on the air board in the computer cabinet. Consult the chart below to determine initial operating values for each system. You may find that these settings need to be modified, depending on the weight of your yarns, operating speed, and other factors.

<u>Regulator</u>	<u>System</u>	<u>P.S.I. Setting</u>
SV 1	Cloth Storage	10-20
SV 2	Beater	60
SV 3	Dobby	60
SV 4	Shuttle (right)	50
SV 5	Shuttle (left)	50

CYLINDER FLOW CONTROLS (Speed Controls)

The speed at which each of the loom systems operates is regulated by “flow controls” located at various points on the loom:

Cloth Advance:	Automatic Advance Cylinder
Harness Lifting:	Dobby Cylinder
Box Changing:	Box Changing Cylinders
Cloth Storage:	Cloth Storage Cylinder

These different systems will operate according to the choreography which you establish. You’ll want the loom to lift, beat, and pick according to your weaving needs at a particular moment. This means you’ll need to set the controls for each of the systems. It sounds much more complicated than it really is and, once you’ve made your initial setting, you won’t need to change them for the balance of your warp. Your installer will make the initial settings.

SYNCHRONIZED LOOM MOTION

There is a particular order in which you'll want to adjust each of the loom's mechanisms. When you've finished, all the systems will work smoothly and in concert. We recommend that you proceed as follows:


- 1.) Automatic Cloth Advance
- 2.) Dobby
- 3.) Beater
- 4.) Box Changing
- 5.) Automatic Cloth Storage

Automatic Cloth Advance Speed Adjustment

Be Safe!!! Put the loom in Manual mode when making any adjustments.

This setting is made at the Automatic Advance Cylinder on the left side of your loom. Find the upper most cylinder, mounted just below the left beater cylinder. You'll see that there are two plastic air tubes coming into the cylinder. At both connecting points, there is an adjusting screw. These are the flow controls.

Use a small screwdriver to turn each screw in or out. Turn the screws counterclockwise to accelerate and clockwise to retard the action of the Automatic Cloth Advance. You'll probably want to operate this system as quickly as possible.

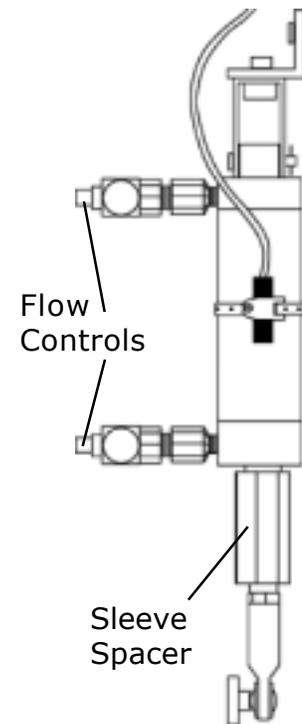

Automatic Advance and Cloth Beam Gear Adjustment


To adjust the Automatic Advance and Cloth Beam Gear Mesh:

- 1.) Loosen the two bolts holding the left Fafnir VCJT1 bearing.
- 2.) Rolling the cloth toward you, feed a single piece of paper between the small Automatic Advance gear and the larger cloth beam gear, stopping when the paper is trapped between the gears.

- 3.) Push down on the Cloth Beam to seat the gears into the paper.
- 4.) Retighten the VCJT1 bearing.
- 5.) Roll the Cloth Beam to check for binding between the gears (does not get harder to turn in one spot). If it does, then repeat the procedure with two pieces of paper and so on, until the beam rolls freely.

Dobby Cylinder Speed Adjustment (controls harness lifting)

The speed at which the harnesses are raised and lowered is controlled from the Dobby Cylinder. This is the large air cylinder that extends from the bottom of the dobbie head on the right side of the loom. You set the flow controls on this cylinder in exactly the same way that you adjust those on the Automatic Advance Cylinder. Remember: clockwise retards, counterclockwise speeds.

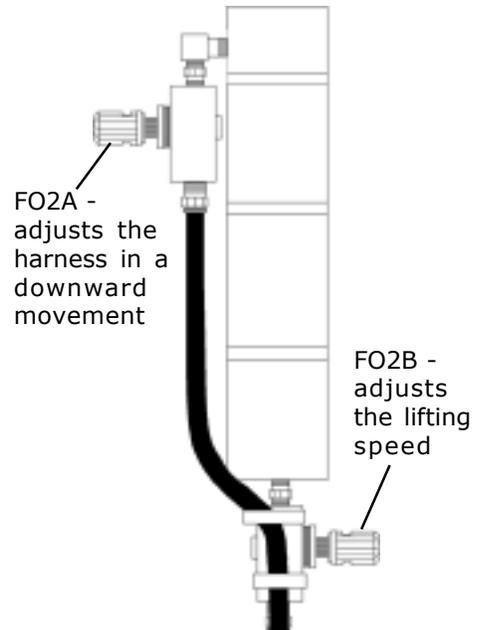

The action of the harnesses needs to be coordinated with the action of the Automatic Advance.

Beater Speed Adjustment

Beater speed and force is a function of air pressure. Use the lowest measure setting needed to achieve a firm beat.

Cloth Storage Power Control


Note that we refer to power, not speed. The only thing you need be concerned about here is **that the action of the Cloth Storage Cylinder is not greater than that of the Automatic Advance Cylinder directly above it.** If the Storage Cylinder is set to overpower the Advance Cylinder, it will cause the warp to creep. To prevent this, set the regulator gauge at about 6 lbs.; just enough that the cloth storage mechanism keeps slack out of the cloth after it rounds the breast beam.

INDUSTRIAL DOBBY LOOM MANUAL

CLOTH BEAM ROTATION ADJUSTMENT (to establish p.p.i.)

The number of picks-per-inch that you'll achieve is determined by the degree of rotation of the Cloth Beam. This is established, mechanically.

Move to the left side of the loom. At the end of the Cloth Beam is a gear. This gear meshes with a second gear mounted below it. Connected to the bottom gear is a slotted lever.

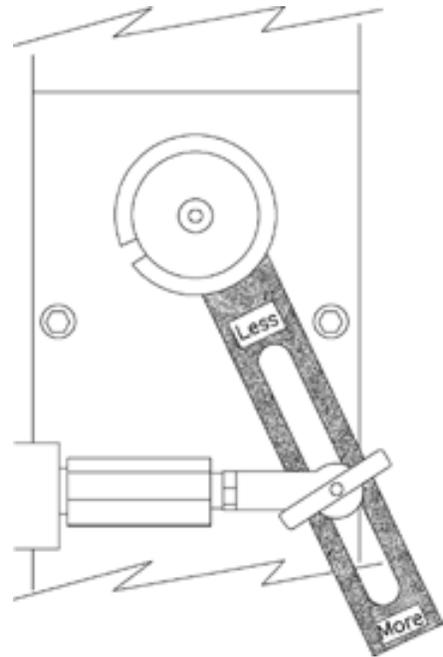

There are two ways to adjust your pick count:

- 1.) By increasing or decreasing the stroke of the adjusting lever.
- 2.) By exchanging one sleeve for another of a different size.

PICK CHART

	<u>Sleeve Size</u>	<u>Lever Position</u>	<u>Picks Per Inch</u>
Small Sleeve #1	1 5/16	Top	4
	1 5/16	Middle	5
	1 5/16	Bottom	7
Small Sleeve #2	1 13/16	Top	6
	1 13/16	Middle	9
	1 13/16	Bottom	14
Small Sleeve #3	2 5/16	Top	16
	2 5/16 Middle	20	
	2 5/16 Bottom	30	
Longest Sleeve #4	2 9/16	Top	25
	2 9/16	Middle	40
	2 9/16 Bottom	60	

These pick counts are approximations and are related to warp tension and by how hard the weft is beat into the warp. Increasing the warp tension and how hard you beat can increase the pick count.

Adjusting Lever


You'll note that the Adjusting Lever is connected to the rod end of the Automatic Advance Cylinder by a locking T-handle. If you loosen this knob, you can move the rod end up or down in the slot. When you move the rod end up, the Cloth Beam rotates more and you have less picks per inch.

Sleeve Exchange

Your IDL is provided with four Automatic Advance sleeves. Each of these will cover a different pick range. The *smaller* the sleeve, the *less* picks per inch.

PRESSURE ROLLER

The Pressure Roller allows you to weave without using your Cloth Storage system. So you can cut off your work at any time without losing warp tension.

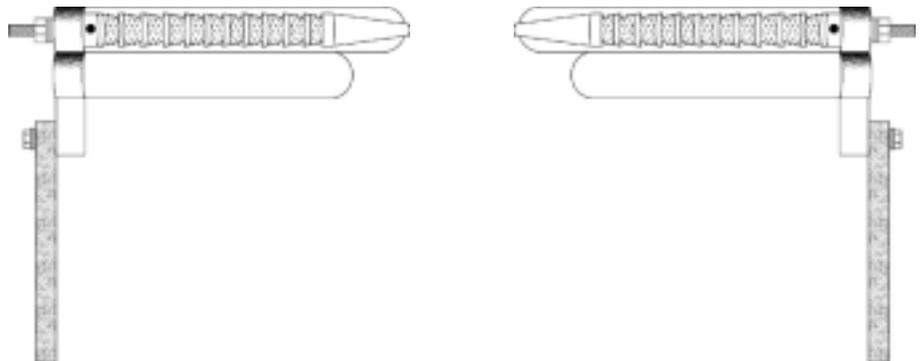


To start:

- 1.) Pull the warp approximately 10" beyond the Cloth Beam.
- 2.) Push the Pressure Roller into the warp under the Cloth Beam until it snaps into place.
- 3.) To remove the roller, relieve tension (two knobs in front under the Cloth Beam), push the arm, and remove the roller.

TEMPLE SYSTEM (to prevent draw-in)

The Temple System is used to maintain a good selvage and prevent draw-in. You'll usually deploy it after you've woven-off a yard or so of fabric, once you have selvage enough to work with. It consists of two rollers (barrels), working in tandem, which grab the selvage and prevent it from drawing in.

This device looks complicated, but is, in fact, relatively easy to work with. Refer to the accompanying illustration and step-by-step instructions for guidance in using this system.

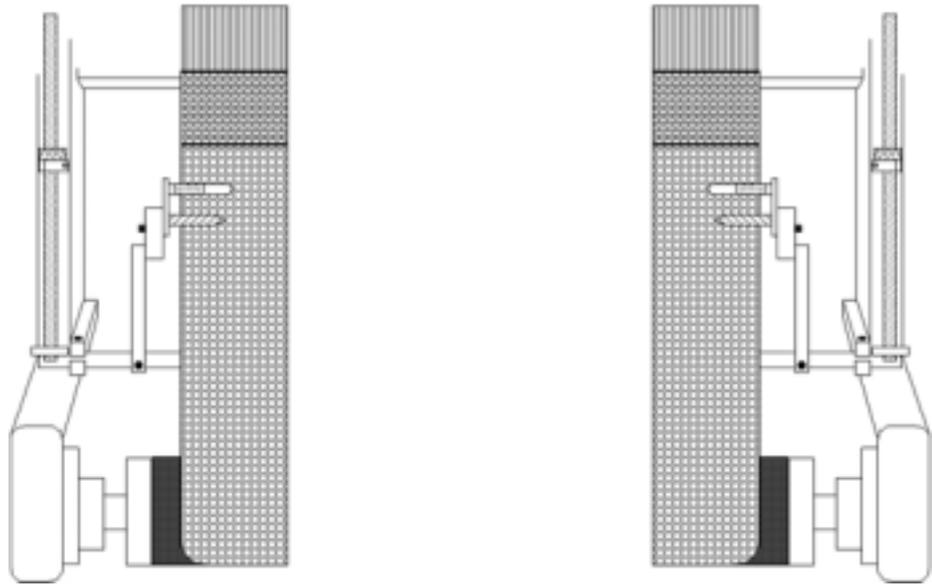

Setting the Temple Rollers

- Check the routing of your fabric against the illustration.
- Loosen the adjusting bolts on the Temple Holder Bracket so that it's somewhat movable.
- Swing the Temple Holder Bracket up and in, so that it is about 1/4" below the warp, with the selvage just touching the inside of the bracket.
- **Open the shed.**
 - Bring the holder up until the ridges on its platform just contact the bottom of the warp. The platform should be parallel with the warp.
 - Tighten the Temple Holder Bracket adjusting bolt.

- Slide the leading roller (with the majority of the needled rings) into its slot on the Holder Bracket. Seat the roller atop the warp and lock it down with a hex key.
- Install the after roller (with rubber grips). It bolts in. (optional)
- Check to be sure that everything is properly tightened down.

The selvages should run freely across the bracket.

Using a Temple System is somewhat of an art and opinion varies amongst weavers about things like the choice of rings and the efficacy of the after roller. However, we can offer some useful guidelines to help get you started.

Temple Rings

We provide you will a set of general purpose rings. If your leading roller is holding the selvage sufficiently well, and isn't causing looping or leaving a perforated line in the warp, you're doing fine. If, however, you're having problems, you made need to investigate different rings. As a rule of thumb, heavier yarns need rings with longer and fewer needles. Finer yarns require rings with more and shorter needles.

For additional information, please contact an AVL Customer Service Representative.

WARP TENSION

The warp tension device on your loom offers a number of advantages; chief amongst these is that it allows you to set tension in extremely fine degrees that remain constant as your beam surrenders warp. Unless you've used other AVL equipment, you're probably not familiar with this way of keeping tension. If you find the concept a little foreign, be patient; we promise that you'll soon recognize its merit.

Set Tension

- Move the weight to its rearmost position, until it nearly touches the wooden pulley at the near end of the arm.
- Advance the warp until the tension arm rises and the cable begins to slip on the brake drum (of the warp beam).
- Ultimately, you'll want the arm to ride horizontally. As you advance the warp, the arm should rise no more than 45° above horizontal and then fall back to horizontal.
- If the arm is riding above horizontal, let the adjusting cord out at the spring. If it's riding low, take up cord.
- Check the tension in your warp. If it's loose, move the weight out on the arm. Advance the warp a little and check again. Continue in this way until you have exactly the tension you want.

Most weavers find that they can weave with less tension using this system.

If you've laid on a very heavy warp, you may need to add weight to the arm. Additional weights can be obtained from AVL. Conversely, warps comprised of extremely fine yarns may require a lighter weight. AVL can provide you with a half-weight if you so desire.

To make it a little easier to learn, we've created a quick reference for you to follow. You may want to copy it and keep it at the loom.

Arm above horizontal	===	Release cord at the spring
Arm below horizontal	===	Take-up cord at the spring
Warp too loose	===	Move weight out
Warp too tight	===	Move weight in

Troubleshooting Tip

The brake drum on the warp beam may, in areas or times of high humidity, swell a bit where the end grain is exposed. This swollen grain can prevent the tension cable from slipping as it should. When this happens, the tension arm will develop a habit of rising and then suddenly dropping.

To correct this problem, unwind the brake cable and lightly sand the grain in the cable race of the drum. Use a very fine grade of sandpaper (220-400#) and sand as little as possible.

Never, under any circumstances, should you apply a wax, or finish, or otherwise treat the cable race on the drum.


SHUTTLE BOX ADJUSTMENT

The shuttle boxes were adjusted when the loom was first installed at your site, however, over time, they may require some attention. You'll know it's time to check these adjustments if your usually tame shuttle seems suddenly to have become an "unguided missile". There are three alignments essential to satisfactory loom operation:

- Backplate tilt (downward angle) zero degree or very slight
- Backplate cant (forward angle) zero degree or very slight
- Shuttle box-to-race alignment - level or slightly higher (1/16" or less). Shelf cannot be lower than the race.


Backplate Tilt

The shuttle boxes must carry a slight downward angle relative to the shuttle race. This angle will cause the shuttle to "hug" the race as it travels across. If the boxes are misaligned in the opposite direction, the shuttle will take on an errant trajectory and may "porpoise" off the race — obviously creating an unsafe condition.

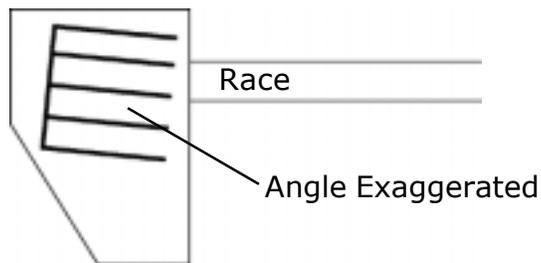

Backplate Cant

The shuttle box assemblies must also carry a slight forward angle. In the same way that a bit of downward angle causes the shuttle to stick to the race, a slight forward canting of the backplates will keep the shuttle properly located against the reed as it travels across the loom. (Too much angle will cause the shuttle to bounce off of the reed and exit the loom area.)

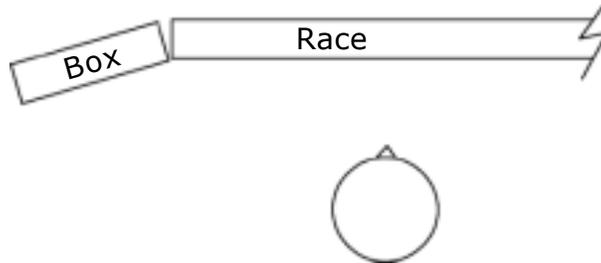


Shuttle Box to Race Alignment


There are two critical alignments to consider here:

- 1.) The *leading edge* of each shelf in the Shuttle Box Assembly must be at precisely the same elevation as the top of the race (alignment "A" in the diagram below). You may check this by laying a straight edge between a box shelf and the race.

Remember: the box assembly will be adjusted at a very slight to no angle, so its only the *edge* of the shelf, immediately opposite the end of the race, that concerns us here. This edge should be at the same height as the top of the race so that the shuttle can make a smooth entry into the Shuttle Box.

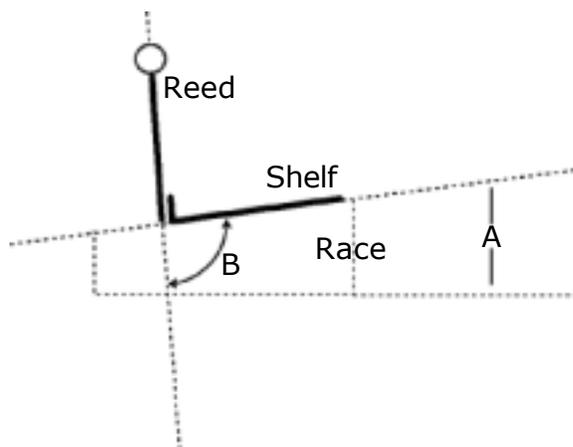

If the box shelves are lower or higher than the race, you'll need to loosen the bolts in the large Box Mounting Bracket that attaches the Shuttle Box Assembly to the side of the loom. This will allow you to make the necessary adjustment.

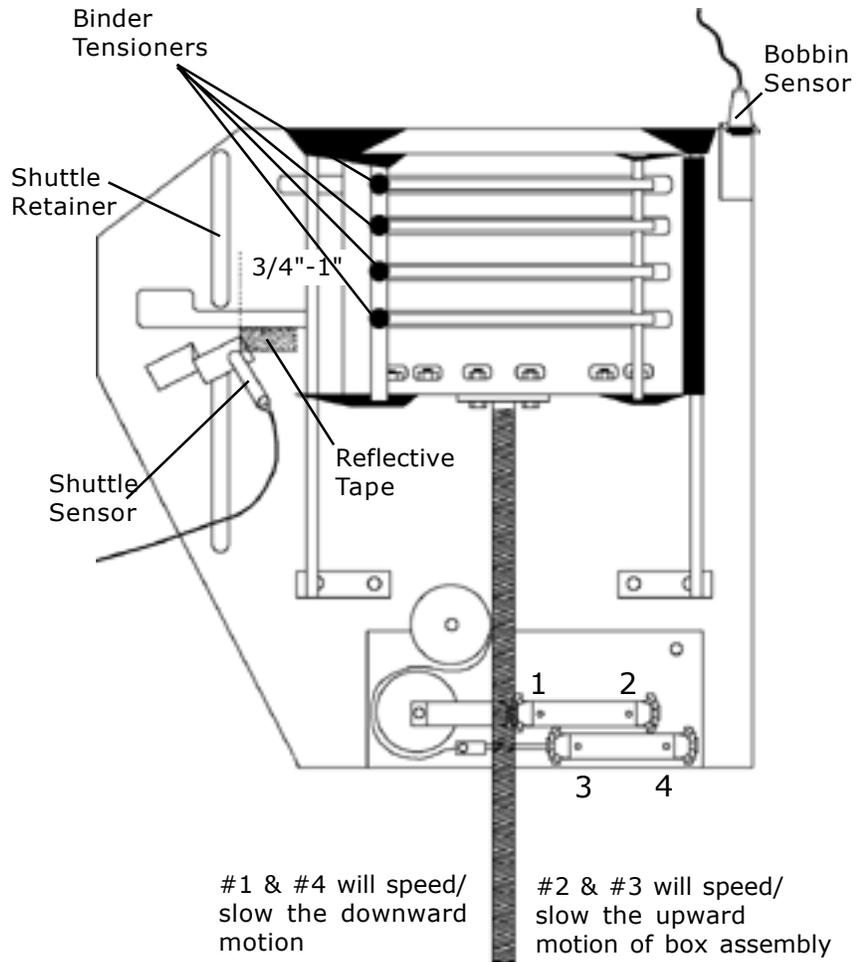

- 2.) The shelves in the box must be in the same *plane* as the race. If you sight down the end of the race, you'll note that it's cut on an angle. The angle of the shelves must correspond (alignment "B").

Again, if you need to correct this alignment, loosen the Box Mounting Bracket and move the box assembly into position.

Box Timing

It's important that you get the timing of your boxes right. If a box moves too slowly, the picker will strike a shelf. If it moves too fast, the assembly will be subjected to constant jarring and possible damage. Because the action of the boxes needs to be synchronous, keep the up/down box speed equal.

INDUSTRIAL DOBBY LOOM MANUAL

MAINTENANCE

The Industrial Dobby Loom is designed to require very little maintenance. We suggest that you observe the following regime, however, you may find that your particular weaving environment requires that you do these things more or less often.

Daily

- Clean any lint away from the optical eyes and the Compu-Dobby.
- Drain any moisture from the FR.

Weekly

- Check the oil level in the FR (if your unit requires lubrication).
- Clean the Compu-Dobby filter (soap and water, air dry).
- Check the loom frame bolts for tightness.

Monthly

- Lubricate the Shuttle Box Spring (with teflon spray, “TRIFLOW”, for example).
- Clean and grease the Cloth Beam Axle (with any bearing grease).

As Needed

- Check the color on the dryer/filter at back of the computer cabinet. Replace the filter cartridge as recommended by the manufacturer.

TROUBLE SHOOTING

General

You'll probably find that most of the problems you encounter, at least until you've become familiar with the characteristics of the loom, involve shuttles. Each time you change from one yarn to another, you'll need to fine tune the binders on the shuttle boxes and adjust the tensioners in the shuttles themselves. You may also need to change the pressure setting at Regulators SV 4 and 5. Very heavy yarns may require that you turn your shuttles around, so that the yarns feed out between the shuttle body and reed. This lessens the shuttle's tendency to veer or yaw away.

Poor air quality will produce an infinity of **Gremlins**. This can't be stressed enough. Dirt, oil, and moisture in your air delivery system can clog and erode valves and other air components. Affected valves may operate sluggishly or not operate at all. Always use a clean air source.

The shuttle boxes are fitted with various optical sensors. These are part of a larger "traffic control system" — not unlike a modern railway switching system — that prevents two shuttles from firing simultaneously. Keep these, and the reflectors opposite them, free of accumulated lint. If, for some reason, two shuttles *do* present at the same time, this system will shut the loom down: the shed will open slightly and the loom will abruptly turn off.

Troubleshooting Tips

Shuttle Doesn't Fire

- 1.) Check for correct air pressure (105+ p.s.i.)
- 2.) Check that shuttle has boxed completely
- 3.) Shuttle sensor out of adjustment (see *Adjustments* section)
- 4.) More than one shuttle presenting:
 - i.) A shuttle may have been placed in the wrong box
 - ii.) A drafting error may have been made; check the program

Shuttle Won't Stay On Race

- 1.) Bobbin improperly wound
- 2.) Knot in weft catching on shuttle tensioner
- 3.) Bobbin nearly empty and out of balance
- 4.) Shuttle boxes need to be adjusted (see *Adjustments*)

INDUSTRIAL DOBBY LOOM MANUAL

Shuttle Doesn't Box Completely	<ol style="list-style-type: none">1.) Insufficient air pressure2.) Binder (shuttle brake) too tight3.) Shuttle boxes need to be adjusted4.) Knotted weft yarn may have hung in the tensioner and impeded shuttle travel; usually, but not always, it stops or derails shuttle
Loom Fires On Empty Box	<ol style="list-style-type: none">1.) Shuttle sensor out of adjustment (see <i>Adjustments</i>)
Loom Stops — Red Light On	<ol style="list-style-type: none">1.) Empty bobbin2.) Two shuttles presenting (see <i>Shuttle Doesn't Fire</i> above)
Loom Stops — Green Light On	<ol style="list-style-type: none">1.) Shuttle not boxed2.) Sensors out of adjustment (see <i>Adjustments</i>)3.) Automatic Advance cylinder too fast
Harnesses Drop or Don't Lift	<ol style="list-style-type: none">1.) Compu-Dobby out of adjustment (see <i>Adjustments</i>)2.) Harness springs too tight3.) Auto Advance cylinder is over-powering doobby cylinder (see <i>Adjustments</i>)4.) Dobby cable controlling errant harness is not engaging in the doobby finger inside the doobby head (poor Compu-Dobby adjustment)
Automatic Cloth Advance Inoperable	<ol style="list-style-type: none">1.) Auto Advance lever is reversed; screws attaching the lever to the bearing housing should be visible2.) Reed Switch is not properly located (see <i>Reed Switch Location Diagram</i>)

Inconsistent Pick Count

- 1.) Cloth Storage system not on
- 2.) Pressure setting too low or too high at the Cloth Storage regulator
- 3.) T-handle on the Automatic Cloth Advance lever is loose
- 4.) Fluctuations in the air delivery — compressor problem
- 5.) Check the cable at the Tension Arm — it may be crossed
- 6.) If the tension is loosening, the black plastic cord lock on the tension tie-up (in the Tension Arm cable) may be slipping; re-set the tension and tie-off with a piece of cord
- 7.) Loose the screw on the Right Vertical Cap (which holds the Cloth Beam Anti-Rollback Bearing)
- 8.) Beater pressure not correct for particular yarns being woven
- 9.) Cloth Beam Gear not properly meshing with the Automatic Advance Gear; gear mount bracket loose

Loose Shed

- 1.) Cloth Storage System not turned on
- 2.) Exceeding pick count possible with yarn being woven; this is especially a problem with thick yarns at high pick counts