



Electric Bobbin Winder Tensioner User Instructions

1. Insert the tip through the first hole, at the front of the Assembly (see Figure 1, below).
2. Use a fine sley hook (the shaft should measure 3/16" wide). Insert the hook (as shown in Figure 2) at the furthest side of the Counter Assembly. It will go through the first pigtail, over the top of the Counter Wheel, through the second pigtail, between the tension plates, and through a hole in the axle to which the Spring Assembly is mounted. Slight resistance may be felt at the axle.
3. Hook the yarn near its end and pull the threading hook straight out the back of the Assembly (see Figure 3).
4. Twist a loop in the yarn between the two pigtails and loop it around the Counter Wheel.
5. Attach the yarn to the pirn, bobbin, or spool and wind on as you normally would.



Figure 1 – Insert tip at first hole

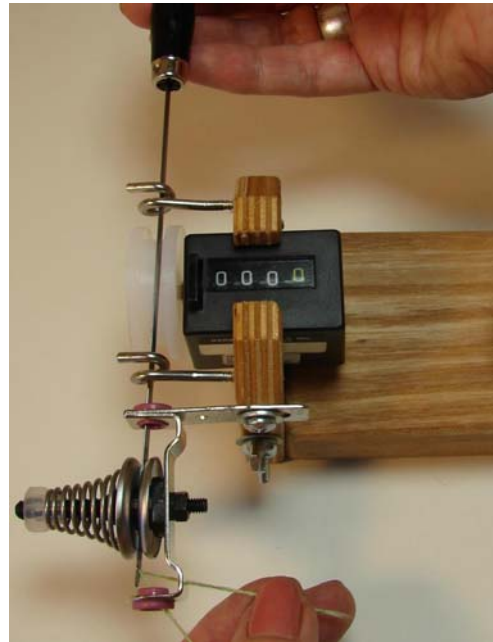


Figure 2 – Insert Sley Hook through Assembly

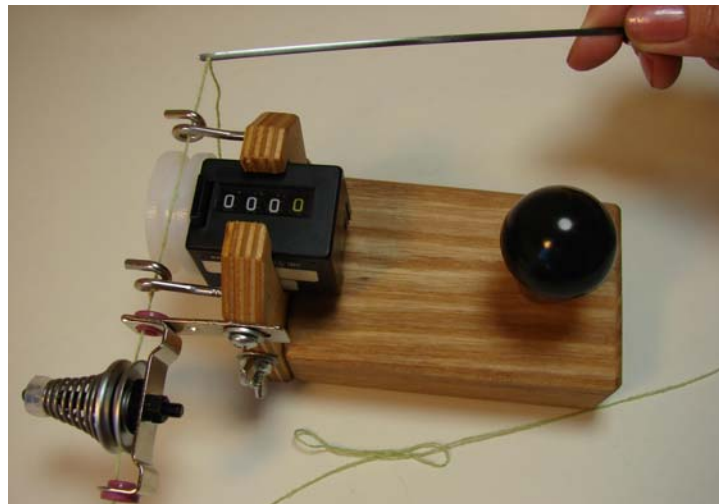


Figure 3 – Pull yarn through all